



# OPERATION INSTRUCTION

K-002-1

## KEYLESS ENTRY SYSTEM

### OPERATION INSTRUCTION

#### 1. LOCK

Press "⏏" on the remote controller once with the direction light flash once, and then the central control door lock will be locked. 30 seconds negative (—) output for window roll-up. The LED will automatically flash.

#### 2. UNLOCK

Press "⏏" on the remote controller once with the direction light flash twice, and then the central control door lock will be unlocked.

#### 3. TRUNK RELEASE

Long press ⏏/⏏/⏏/⏏ for 2.5 seconds, the direction light will flash three times and trunk release simultaneously.

#### 4. CAR FINDING

In arming, press "⏏" once, direction light flash three times, for finding the car.

5. pneumatic lock/electric lock can be selected just like diagram display

### Circuit Diagram of Remote Central Control Lock System

